

SignPanel Universal^E

Assembly, Installation & Maintenance Instructions

Wall Module Maintenance

Outside of Universal Cartridge Module:

The clear plastic faces may be scratched if cleaned with abrasive materials. The following suggestions will keep your display looking its best:

Dusting:

Dust with a damp, soft cloth or damp chamois only, taking care to wipe gently.

Washing:

Wash with a mild solution of liquid dish detergent and lukewarm water. Use a clean, soft cloth or soft sponge and generous solution. Dry by blotting or lightly wiping with a damp cloth or chamois.

Do Not:

Use such products as window cleaners, liquids containing ammonia, scouring compounds, gritty cloths, gasolines or solvents (alcohol, acetone, kerosene, carbon tetrachloride, naphtha or any aromatic hydrocarbons).

After cleaning, apply an anti-static cleaner such as Brilliance, using a soft, lint-free cloth.

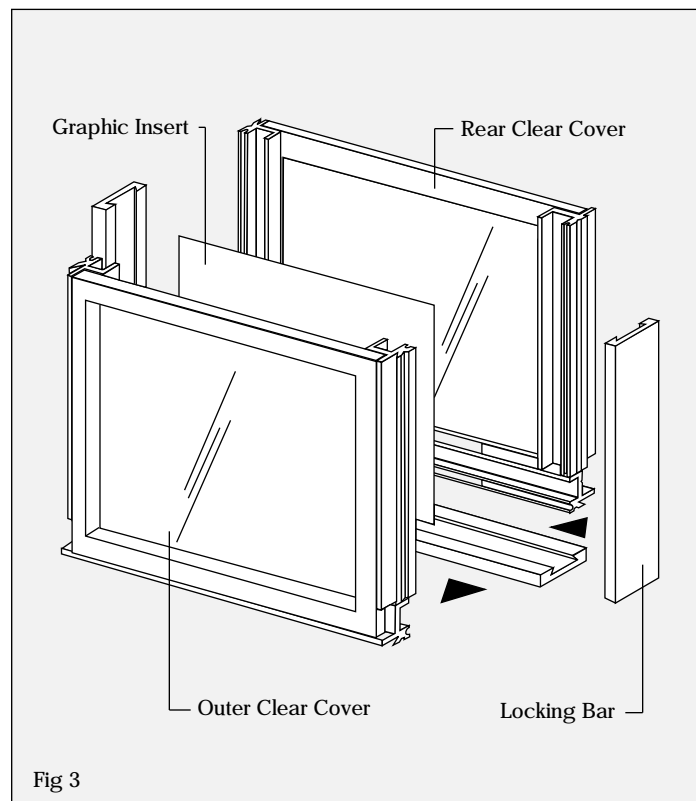


Fig 3

Inside of Universal Cartridge Module:

The cartridge module is designed to be easily removed and dismantled for change of graphic display and cleaning.

To Change Graphics:

Remove top caps from each vertical channel, lift off top trim and simply spread open by hand pressure only, the two clear covers. Reach into the pocket to access graphic material. There is no need to completely remove module.

To Clean Inside Cartridge Module:

Remove the cartridge completely from vertical channels, then slip off the two vertical and bottom locking bars (ref. Fig. 3). Follow the instructions for cleaning above.

Should the clear cover need replacing, use the rear cover in place of the front, as the two are identical.