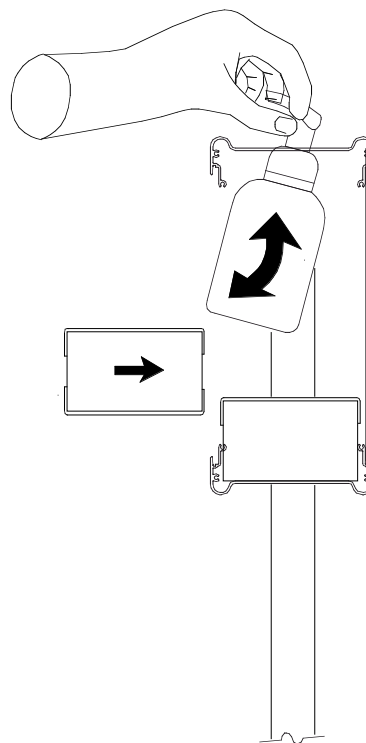


Hand Foam

1. Insert top handle through circular hole in cabinet top. Hold the container with one hand while inserting the Lifter beneath. Push Wedge Lifter fully into the cabinet.

**Hand Wipes**

2. To install Wipes, slip container under large hole and align cap so it matches the cabinet.

Press Wedge Lifter under container base. (Fig. 7)

